

GIVE YOUR GUESTS AN UNFORGETTABLE STAY

You will find more Dometic minibars and safes than any other make in first-class hotels across the world. Why? Know-how accumulated over 50 years, a track record of innovation as well as leading design solutions are the three main reasons.

The top of the line new HiPro Evolution and Alpha range minibars are developed with your business experience in mind. A sustainable minibar is a smart minibar. The new HiPro Evolution range is just that. Boasting precise temperature control, world-class efficiency and the best minibar cooling capacity, the premium Dometic HiPro range ensures chromate-free absorption technology checks in for a clean, sustainable future in your hotel.

Our modern and energy-efficient range of noiseless drawer minibars (Dometic DM 20 drawer minibar).



New Dometic HiPro minibarsThe world's best minibars

The state-of-the-art design of Dometic HiPro will help you create a premium in-room feeling. With sleek design, elegant illumination and crystal clear doors, invite your guests to treat themselves to something special.

Sustainability checking in

Sustainability means doing more with less. It's a philosophy we put into action with outstanding energy efficiency and the first chromate free minibar range on the market. A sustainable minibar is a smart minibar. The all new HiPro range delivers more powerful cooling with up to 40% less energy consumption, making a visible difference OPEX for hotel owners.

Read more on this on p. 12



Dometic drawer minibarsUnique design, outstanding construction

Our drawer minibars are a class of their own in terms of design, size and functionality. Noiseless cooling, convenient slide-out access.

Read more on this on p. 20





DOMETIC MINIBARS

ALWAYS AT YOUR SERVICE

design, and the silence that your guests appreciate. What can be measured is efficiency. With improved cooling performance and up to 40 % lower energy consumption, it's clear to see why the HiPro

Premium can't be measured. It's all about the first impression, elegant range is considered the world's best minibar. After more than 50 years in the hotel business and 6 million installed units, we're proud to say that we're pioneering the hotel industry. Again.

1. COST REDUCTION

The new HiPro offers best-in-class energy efficiency - no matter which cooling technology is used.

2. SUSTAINABILITY

We work hard to achieve even lower footprints within manufacturing as well as energy consumption.

PIONEERING THE HOTEL INDUSTRY.

guest experience.

3. GUEST EXPERIENCE

HiPro will not only deliver premium cooling performance - it is also an attractive and sales promoting feature in the guest room.

4. STRONG PARTNERSHIP

After more than 50 years in the hotel business we have a strong promise to ensure care free maintenance.

SUSTAINABLE MINIBARS FOR A CLEAN FUTURE

Chromate has been the established industry standard corrosion inhibitor used in the production of absorption minibars for decades. Current EU legislation, however, stipulates the phase-out of this substance latest during 2021 for import to Europe and from January 2020 for European production.

Does that mean an end to the noiseless and wear-resistant absorption cooling technology? No, it doesn't. After more than two decades of intensive research and development, we are now in the unique position to offer a sustainable alternative. The new inhibitor has been thoroughly in situ tested for over ten years and is now ready to substitute chromate in our minibar factory in Jaszbereny, Hungary. The challenge was to find an environmentally sound substance that would have the same anticorrosive effect as the well proven chromate.

- Chromate-free inhibitor means environmental and health protection for production worker, customer and user.
- All our cooling technologies (absorption, silent thermoelectric and compressor) meet the most ambitious Energy Efficiency Index.
- Dometic products are fulfilling the new ErP legislation applicable from March 2021 (EU 2019/2016)
- Resource efficiency during the entire life cycle.











AT HOME IN THOUSANDS **OF HOTELS**


Over the last 40 years, Dometic has supplied Dometic is the world's leading supplier of minibars to hotels and cruise lines around the range of tough and reliable safes.

minibars to the hotel industry. And it is not world. Today, we are the market leader. In only the most luxurious hotels in the world addition to cooling solutions, we provide a that come knocking on our door but also hotels of every star rating. For the past 50 years, there have been more than 6 million minibars manufactured by Dometic installed in hotel rooms around the world.







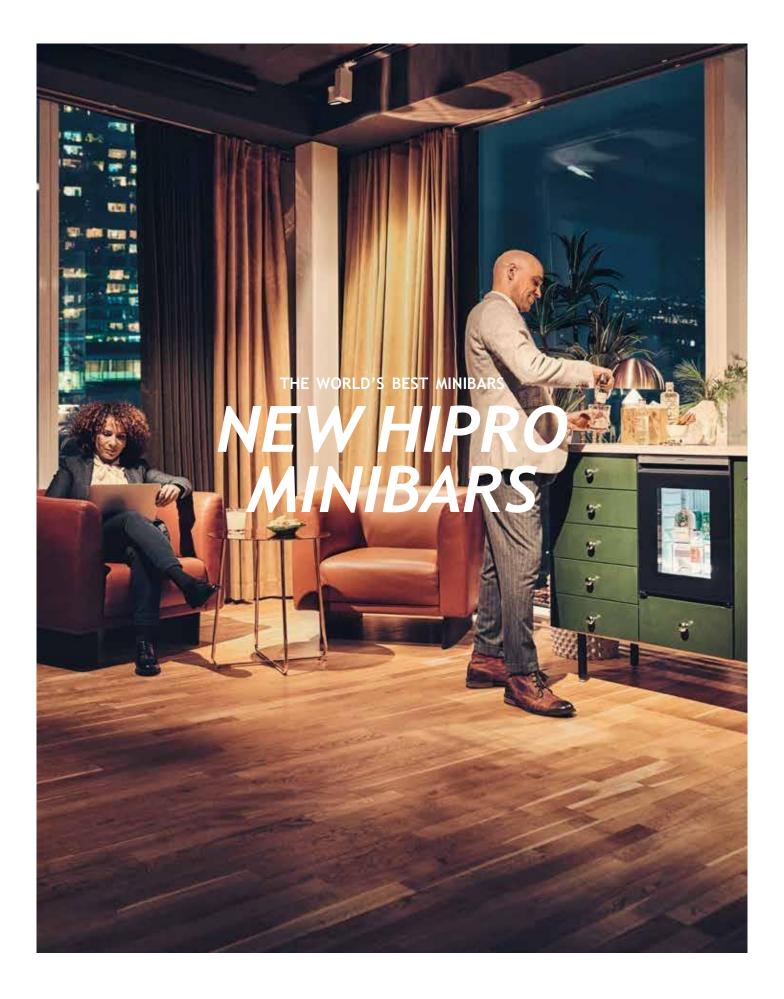

WE DEVELOPED HIPRO WITH HOTEL GUESTS IN MIND

A well-stocked minibar is an expected and appreciated hotel room feature for well-traveled hotel guests. Let's have a deeper look at some outstanding features we offer to the market with the all-new HiPro minibar generation:



Lower energy consumption

Dometic's new HiPro range will reduce energy consumption by up to 40%.

Premium guest experience

New HiPro will be an attractive and sales-promoting feature in the guest room.

Improved cooling power

Improved cooling capabilities with updated and optimized functionality.



A strong partner

With more than 50 years of experience and more than 6 million installed units; we are a proven partner.



EVOLUTION N40S

Key lock



EVOLUTION N30S

Key lock

EVOLUTION A30S



EVOLUTION A30S



EVOLUTION A40S

TECHNICAL DATA	

HIPRO LINE

MODEL

Cooling technology	NTE	Absorption	NTE	Absorption
Model class (liter)	30	30	40	40
Storage volume (liter)	26	26	33	33
Door type	Stainless steel door	Stainless steel door	Stainless steel door	Stainless steel door
Product dimensions (H×W×D, mm)	520/384/415	520/384/446	550/405/435	550/405/466
Can be built-in/integrated	With ventilation	With ventilation	With ventilation	With ventilation
Variable sliding hinge	Yes	Yes	Yes	Yes
Variable door hinge	Yes	Yes	Yes	Yes
LED interior light	Ambient top + bottom	Ambient top + bottom	Ambient top + bottom	Ambient top + bottom
Input rating (W)	55	60-70	55	60-70
Energy consumption (kWh/24 h)	0.259	0.535	0.262	0.576
Noise level (dB[A])	0	0	0	0
Energy class	F	G	F	G
Features	Noiseless Low energy consumption Ambient illumination 1 x door rack with decorative trim 1 x tempered glass shelf Adjustable shelf Aluminium handle Decorative panel on evaporator	 Noiseless Ambient illumination 1 x door rack with decorative trim 1 x tempered glass shelf Aluminium handle Adjustable shelf Decorative panel on evaporator Long lasting technology 	Noiseless Low energy consumption Ambient illumination 2 x door rack with decorative trim 2 x tempered glass shelf Adjustable shelf Aluminium handle Decorative panel on evaporator	 Noiseless Ambient illumination 2 x door rack with decorative trim 2 x tempered glass shelf Aluminium handle Adjustable shelf Decorative panel on evaporator Long lasting technology



A sustainable minibar is a smart minibar. The new HiPro range is just that. It's also more efficient with improved cooling and up to 40% less energy consumption. Add to that the first chromate-free absorption inhibitor on the market and sustainability is an easy choice. After more than 50 years in the hotel business and 6 million installed units, we're proud to say that we're pioneering the hotel industry. Again.





Aluminium handle Stylish aluminium handle for all



Control panel Easy to use control panel with status LED .



Door racks Included in all type of doors, also for the



Options





EVOLUTION N40S



EVOLUTION A40S









MODEL	EVOLUTION N30P	EVOLUTION N40P	
Cooling technology	NTE	NTE	
Model class (liter)	30	40	
Storage volume (liter)	26	33	
Door type	Mirror panel door	Mirror panel door	
Product dimensions (H×W×D, mm)	520/384/415	550/405/435	
Can be built-in/integrated	With ventilation	With ventilation	
Variable sliding hinge	No	No	
Variable door hinge	Yes	Yes	
LED interior light	Ambient top + bottom	Ambient top + bottom	
Input rating (W)	55	55	
Energy consumption (kWh/24 h)	0.259	0.262	
Noise level (dB[A])	0	0	
Energy class	F	F	
Features	 Noiseless Low energy consumption Ambient illumination 1 x door rack with decorative trim 1 x tempered glass shelf Adjustable shelf Aluminium handle Decorative panel on evaporator 	 Noiseless Low energy consumption Ambient illumination 2 x door rack with decorative trim 2 x tempered glass shelf Adjustable shelf Aluminium handle Decorative panel on evaporator 	
Options	Key lock	Key lock	



EVOLUTION N30P

HIPRO LINE TECHNICAL DATA





EVOLUTION N40P EVOLUTION N30G

MODEL	EVOLUTION N30G	EVOLUTION A30G	EVOLUTION N40G	EVOLUTION A40G
Cooling technology	NTE	Absorption	NTE	Absorption
Model class (liter)	30	30	40	40
Storage volume (liter)	26	26	33	33
Door type	Transparent glass door	Transparent glass door	Transparent glass door	Transparent glass door
Product dimensions (H×W×D, mm)	520/384/415	520/384/446	550/405/435	550/405/466
Can be built-in/integrated	With ventilation	With ventilation	With ventilation	With ventilation
Variable sliding hinge	No	No	No	No
Variable door hinge	Yes	Yes	Yes	Yes
LED interior light	Ambient top + bottom	Ambient top + bottom	Ambient top + bottom	Ambient top + bottom
Input rating (W)	55	60-70	55	60-70
Energy consumption (kWh/24 h)	0.620	0.704	0.664	0.727
Noise level (dB[A])	0	0	0	0
Energy class	G	G	G	G
Features	Noiseless Low energy consumption Ambient illumination 1 x door rack with decorative trim 1 x tempered glass shelf Adjustable shelf Aluminium handle Decorative panel on evaporator	Noiseless Ambient illumination 1 x door rack with decorative trim 1 x tempered glass shelf Aluminium handle Adjustable shelf Decorative panel on evaporator Long lasting technology	Noiseless Low energy consumption Ambient illumination 2 x door rack with decorative trim 2 x tempered glass shelf Adjustable shelf Aluminium handle Decorative panel on evaporator	Noiseless Ambient illumination 2 x door rack with decorative trim 2 x tempered glass shelf Aluminium handle Adjustable shelf Decorative panel on evaporator Long lasting technology
Options	Key lock	Key lock	Key lock	Key lock





EVOLUTION A30G





EVOLUTION N40G

EVOLUTION A40G

See the replacement guide on p. 28 and 29 which new HiPro can replace your excisting minibar.















MODEL	ALPHA N30S	ALPHA A30S	ALPHA N40S	ALPHA A40S	ALPHA C40S
Cooling technology	NTE	Absorption	NTE	Absorption	Compressor
Model class (liter)	30	30	40	40	40
Storage volume (liter)	26	26	33	33	33
Door type	Metal sheet door	Metal sheet door	Metal sheet door	Metal sheet door	Metal sheet door
Product dimensions (H×W×D, mm)	520/384/415	520/384/446	550/405/435	550/405/466	550/405/481
Can be built-in/integrated	With ventilation	With ventilation	With ventilation	With ventilation	With ventilation
Variable sliding hinge	Yes	Yes	Yes	Yes	Yes
Variable door hinge	Yes	Yes	Yes	Yes	Yes
LED interior light	LED top light	LED top light	LED top light	LED top light	LED top light
Input rating (W)	55	60-70	55	60-70	45
Energy consumption (kWh/24 h)	0.259	0.535	0.262	0.576	0.130
Noise level (dB[A])	0	0	0	0	33
Energy class	F	G	F	G	С
Features	 Noiseless Low energy consumption 1 x door rack 1 x plastic shelf Adjustable shelf 	 Noiseless 1 x door rack 1 x plastic shelf Adjustable shelf Long lasting technology 	 Noiseless Low energy consumption 2 x door rack 1 x plastic shelf Adjustable shelf 	 Noiseless 2 x door rack 1 x plastic shelf Adjustable shelf Long lasting technology 	 High performance Integrated silent mode 2 x door rack 1 x plastic shelf Adjustable shelf
Options	Key lock	Key lock	Key lock	Key lock	Key lock



EXPERIENCE











ALPHA N30S

ALPHA A30S

ALPHA N40S

ALPHA A40S

ALPHA C40S



DEVELOPED W

Many business travellers are constantly on the move living a suitcase life. Most days represent hard work with long hours - arriving late to the room preparing for the next day's meeting while burning the midnight oil. That's why the minibar is a much-appreciated feature offering cold beverages and energizing snacks. For the leisure tourist, the hotel minibar is an opportunity to enjoy a cold beverage at the late arrival check-in, after a long city excursion and while getting ready for a fun night out - or perhaps waking up with a need to

II I proper

quench the thirst.

Black handle





Luxury black handle for all Alpha models

Plastic door racks







MODEL	DM 20 D/F	DM 50 NTE D/F
Model class (liter)	20	50
Storage volume (liter)	15.8	45
Cabinet colors	Anthracite	Anthracite
Dimensions built-in version (H \times W \times D, in mm)	DM 20 D: 365 × 384 × 428 DM 20 F: 365 × 384 × 398	DM 50 NTE D: 418 × 550 × 517 DM 50 NTE F: 418 × 550 × 487
Can be built-in/integrated	•	•
LED interior light	•	•
Input rating (W)	52	75
Energy consumption (kWh/24 h)	0.20	0.25
Noise level (dB[A])	0	0
Features	 Highly flexibel system of dividers and bottle fingers DM 20 D: with a decorative anthracite panel and handle DM 20 F: prepared for a decor panel to match the furniture design of the room 	 Highly flexibel system of dividers and bottle fingers DM 50 D: with a decorative anthracite panel and handle DM 50 F: prepared for a decor panel to match the furniture design of the room
Options	• Lock	• Lock



Convenient slide-out access, noiseless operation, low energy consumption: Dometic drawer minibars set new standards in design and efficiency. Dometic DM 20 is the world's first noiseless 20-liter class drawer minibar. Having the same width as conventional 30-liter absorption minibars, it will easily replace them. Dometic DM 50 provides 50 liters capacity in an award-winning design featuring an automatic slide-out tray for snacks and mini bottles and an adjustable drawer for bottles and cans.

- Unique design for convenient slide-out access
- Thermoelectric cooling unit for low energy consumption
- Noiseless cooling comfort
- Patented and design awarded technology







Perfect workmanship - removeable and smooth running sliding rails for convenient use.



LED interior light - nicely features the snacks and beverages inside.



Simply slides out and self closing drawer provides easy access to the contents.



D models with Dometic front panel - F models with a front panel of your choice

D Version: Door with anthracite grey Dometic front panel and handle

F Version: Door with plain front allowing the designer and furniture manufacturer to complete the door finish with a custom front panel based on our specifications (dimensions/ thickness/weight)



Available in 20 liter - this glass door model offer plenty of room for an appealing product presentation with potential for profit. Full frame glass door supports consumption for increased turnover.



RH 418 NTEG



Highly flexible shelving system.



The minibar can optionally be equipped with a handle. (RH 429 LDAG).



Easy to change from right to left hand hinge.





TECHNICAL DATA

MODEL	RH 418 NTEG	RH 429 LDAG
Model class (liter)	20	20
Storage volume (liter)	18	18
Cabinet color	Anthracite	Anthracite
Dimensions built-in version (H \times W \times D, mm)	435×422×350	435 × 422 × 384
Can be built-in/integrated	•	•
Variable door hinge	•	•
LED interior light	•	•
Input rating (W)	65	75
Energy consumption (kWh/24 h)	0.222	0.74
Noise level (dB[A])	0	0
Features	1 adjustable metal shelf with recess for tall bottles Glass door with aluminium frame	 1 adjustable metal shelf with recess for tall bottles Glass door with aluminium frame
Options	LED door opening control Temperature setting by remote control Door handle Lock	 LED door opening control Temperature setting by remote control Also available as stand-alone model (FS version) Door handle Lock





RH 418 NTEG

RH 429 LDAG

CLASSIC LINE MINIBARS

ENERGY EFFICIENCY MADE EASY

Energy-saving made easy. Our Classic Line models bring cooling comfort to hotels and residences. Equipped with innovative and energy-efficient absorption cooling technology, Classic Line minibars combine silent service and maintenance-free convenience with added value. All models feature energy-efficient Fuzzy Logic temperature regulation, automatic defrost and well proven Dometic design, inside and out.

- Perfectly silent cooling technology won't disturb guests
- Highly flexible door racks and shelves to present a wide selection of minibar items
- Fully-automatic defrosting for maximum comfort

TECHNICAL DATA		
MODEL MODEL	RH 418 NTE	RH 423 LDA
Model class (liter)	20	20
Storage volume (liter)	18	23
Cabinet color	Anthracite	Anthracite
Dimensions built-in version (H×W×D, mm)	435 × 422 × 350	435 × 422 × 384
Can be built-in/ integrated	•	•
Sliding hinge	•	•
Variable door hinge	•	•
LED interior light	•	•
Input rating (W)	65	65
Energy consumption (kWh/24 h)	0.222	0.63
Noise level (dB[A])	0	0
Features	 1 door rack for smaller bottles 1 adjustable metal shelf with recess for tall bottles 	 1 door rack for smaller bottles 1 adjustable metal shelf with recess for tall bottles
Options	 LED door opening control Temperature setting by remote control Sliding hinge Lock 	 LED door opening control Temperature setting by remote control Also available as stand-alone model (FS version) Lock





RH 423 LDA

HIPRO 6000 MINIBAR

60 LITER MINIBAR

Dometic HiPro has redefined the standards for pioneering minibar design - the result of over decades of consistent development. With the aim of maximum customer satisfaction, we have scrutinised all the requirements of comfort and technology in detail. The result will impress you.

HiPro minibar is distinctive due to their contemporary design and a whole host of innovative technical detail solutions that are so unique that we have grouped them together under the name HiPro technology.

HiPro technology stands for a quality dimension which only Dometic can offer you.



TECHNICAL DATA	
MODEL	HIPRO 6000
Model class (liter)	60
Storage volume (liter)	48
Cabinet color	Anthracite
Dimensions built-in version $(H \times W \times D, mm)$	568 × 490 × 475
Can be built-in/integrated	•
Variable sliding hinge	•
Variable door hinge	•
LED interior light	•
Input rating (W)	80
Energy consumption (kWh/24 h)	0.66
Noise level (dB[A])	0
Model versions	Basic, Standard
Features	HiPro Basic • 2 long shelves • Flat inner door • Integrated door handle HiPro Standard • 2 short shelves • Inner door with 2 multifunctional racks (one for large bottles and one for small) • Inner door in the "bottle body" design for 1.5-liter bottles • Integrated door handle
Options	LockDecorative panel

• LED door opening control display • Infra-red remote control

- Modular system of shelves and door racks
- Low energy consumption for noiseless absorption minibars
- Setup diagnosis via LED
- Sensor-controlled LED interior light
- LED door opening control display (optional)
- Temperature setting by remote control
- Clip & Click: door hinge can be changed without tools
- Automatic Defrost





HiPro Basic

HiPro Standard

RH 418 NTE









TECHNICAL DATA

MODEL	DS 200 FS/BI	DS 300 FS/BI	DS 400 FS/BI	DS 600 FS/BI
Model class (liter)	20	30	40	60
Storage volume (liter)	21	27	32	43
Cabinet color	Black or white	Black or white	Black or white	Black or white
Dimensions FS* (H×W×D, mm)	495 × 422 × 393	580×422×393	580 × 422 × 450	592 × 486 × 494
Dimensions built-in version** (H×W×D, mm)	455 × 422 × 383	540 × 422 × 383	540 × 422 × 440	552 × 486 × 484
Can be built-in/integrated	•	•	•	•
Variable door hinge	•	•	•	•
LED interior light	•	•	•	•
Input rating (W)	65	65	65	65
Energy consumption (kWh/24 h)	0.74	0.76	0.76	0.77
Noise level (dB[A])	0	0	0	0
Features	 Adjustable plastic shelf with recess for tall bottles Flat inner door Handle (FS) 	 2 adjustable plastic shelves with recess for tall bottles Flat inner door 	 2 adjustable plastic shelves 3 adjustable door racks	 2 adjustable plastic shelves 3 adjustable door racks
Options	Sliding hinge Lock	Sliding hinge Lock	Sliding hinge Lock	Sliding hinge Lock

*FS version: with foot frame, door decor panel and back cover, ** BI version: for fully-integrated installation (with sliding hinge, without exterior ABS plastic cabinet, door panel and foot frame)







DS 400 FS/BI



DS 200 FS/BI

DS 300 FS/BI

DS 600 FS/BI

EASY CUSTOMIZING WITH BI MODELS

Designed for built-in use: BI mini fridges are delivered with a sliding hinge to be fastened to the furniture door to compensate for the differing turning points between the furniture and fridge door. That means the refrigerators can be easily fitted with a front panel to suit your interior design concept.



White

Black

Built-in

When there is no room for an ordinary refrigerator, a Food Line mini fridge can be a great advantage. Widely used in hospitals, nursing homes and offices all over the world, these smart products have now arrived in our hotel collection. And for good reason too:

Food Line mini fridges provide silent cooling comfort without compromise. As the only cooling appliances in their class, they are also suitable for storing fresh food. Ideal for Bed&Breakfast inns, guesthouses and smaller hotels:

THE DOMETIC FOOD LINE MINI FRIDGE

Unique worldwide. No other noiseless refrigerator reaches an interior temperature of 4°C at up to an ambient temperature of 32°C.

Ideal for:

- Nursing homes
- Hospitals
- Offices/meeting rooms
- At home as an additional refrigerator in the bedroom, living room or children's room
- Student homes/apartments